MODECOM VOLCANO LANPARTY RGB

System requirements PC compatible with Windows OS USB port

Setup Connect the keyboard to your PC. Download drivers from MODECOM website and open setup file.

Software installation

Język inst	alacji			\times				
	Wybierz język uży	/wany podczas i	nstalacji:					
	English							
	[ОК	Anuluj					
😵 Setup	- Lanparty RGB	Driver				_		×
Selec W	t Destination Lo here should Lanpa	rty RGB Driver b	e installed?				l ®	J
1	Setup will ins	tall Lanparty RG	B Driver into	the follo	wing folder.			
То	o continue, click Ne	xt. If you would	l like to sele	ct a differ	rent folder, cli	ck Brows	se.	
C:	:\Program Files (x8	86)\Lanparty RG	B Driver			Bro	wse	
At	least 13,1 MB of f	ree disk space is	required.					
					Next	>	Cance	el

💟 Setup - Lanparty RGB Driver	_		×
Select Additional Tasks Which additional tasks should be performed?			
Select the additional tasks you would like Setup to perform while ins RGB Driver, then click Next.	talling La	anparty	
Additional shortcuts:			
✓ Create a desktop shortcut			
< Back Net	xt >	Ca	incel

Setup - Lanparty RGB Driver -		X
Ready to Install Setup is now ready to begin installing Lanparty RGB Driver on your compo	ıter.	
Click Install to continue with the installation, or click Back if you want to re change any settings.	view or	
Destination location: C:\Program Files (x86)\Lanparty RGB Driver Additional tasks: Additional shortcuts: Create a desktop shortcut	2	~
< Back Install		Cancel



Macro recording

You can assign various functions to all keys.

Profile1	77	7
Profile2	V	
Profile3		
Macro	ESE FI FZ F3 F4 F5 F6 F7 F8 F9 F10 F11 F12 P5 S. T	2B ♦
■ Ligh	TI 20 30 43 5% 6A 72 B+ 51 0 - 6 + 6+ 10 HU UU B 0 W E R T Y U I 0 P ((33 1) 10 UU A 5 5 F G H U K L 11 T + 10 VOLEAND A 2 X C Y B N M C > 77 A 6 CTRC # ALT FN 6 CTRL 4 6	10 33 39 3 3
	USB Report	
Restore Default	● 125Hz ● 250Hz ● 500Hz ● 1000Hz	
	OK Car	ncel Apply

Click "Single key" in order to change its function.

Profile1		77	
Profile2			
Profile3			
Macro	555 FJ F2 F3 F4 F3 F6 F7 75 V13 26 38 V3 57 GA 76 80	FB F9 F10 F11 F12 FP5 5L P9 B + 0 F1 F12 F12 F15 5L P9 D1 01 - 1 + 1 + 1 H14 F12	
Ligh			ດ
	Single key Macro setting	Please input a single	
	Multimedia		
	USB Report		
Restore Default	● 125Hz ○ 250Hz ○ 5	OK Cance	el

Click "Macro setting" to record macro.

Profile1 Profile2 Profile3			
Macro Ligh	ESC FI F2 F3 F4 F5 F6 F6 W F Key A Z X Single key Macro setting Multimedia	Macro Uptop Up Down Bottom	
Restore Default	USB Report • 125Нz • 250Нz (OK Cancel OK Cancel	İy

If you want to record macro, click "+", then click "Record" and click the combination you want to assign, e.g. "Shift+A+Z", then click "Stop Recording" to conclude macro recording.

Enter a given number in "Record DelayCycles" in order to determine the number of cycles for macro execution, then confirm with "OK".

Profile1			/
Profile2			
Profile3			
Macro	555 FJ FZ F3 F4 F5 F6	F7 F8 F9 F10 F11 F12 F15 SL P M B € 0 F1 F12 F12 F12 F12 F15 SL P M B F1 F12 F12 F15 SL P M B F1 F15 F12 F12 F15 SL P	<u>د</u>
Eligh			<u> </u>
	Single key	Macro Macro1 ~ Uptop Keys Act Delay(+ - Record
	Macro setting	Up	Delete
	Multimedia	Down	Clear
	USB Report	Bottom	
Restore Default	<mark>●</mark> 125Нz ●250Нz ●5	Record DelayCvcles	
fare preserve the second states		OK Ca	ancel
	and the second		



If you want to assign a multimedia function, click "Multimedia" and choose a given function, then confirm with "OK".

Profile1		Kev		0
Profile2				
Profile3		Single key	Select a Media	
			Media Player 🛛 🗸	·
Macro	ESC F1 F2 F3	Macro setting	Media Player	
	10 11 26 3# 45	Multimedia	Play/Pause	
■ Link	A A WER	Multimedia	Stop Play	
	() () () ()		Prev Track	
	A Z X C		Next Track	acal
			V-	ICEI
			Mute	
			WWW Home	
2월 - 44일 - 12일 br>- 12일 - 12 - 12일 - 12			WWW Refresh	
			WWW Stop	
	USB Report		WWW Back	
Restore Default	◎ 125Hz ○ 250Hz ○ 500Hz	2 🔘 1000Hz	WWW Forward	
			WWW Favorite	
			WWW Search	Apply
			Mail	
			Indi	_

If you want to change polling rate for USB interface, choose a given level between 125Hz and 1000Hz in "USB Report" section".



If you want to access the recorded macro, click "Macro", edit macro parameters, then confirm with "OK".

Profile1 Profile2 Profile3			V
Macro	Macro		PS SL PB
Ligh	Macro setting	Macro Macro 1 + - Uptop Macro 1 Record Up Down Sottom Clear Bottom Record DelayCycles 1 OK Cancel	INS HM PU L1 L2 L3 SEL BO TO U VOLCAND
Restore Default	USB Repo	ort 250Hz500Hz1000Hz	
			OK Cancel Apply

If you want to access backlight parameters, click "Light".

Profile1	577	
Profile2		
Profile3		
Macro	550 FI FZ F3 F4 F5 F6 F7 F8 F9 F10 F11 F12 F5 SL P8	
☐ Ligh Clouds fly ✓	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	
Speed —		
Color 🔤 🗹 Colourful		
Directi 🕅 🕅		
	USB Report	
Restore Default	● 125Hz ● 250Hz ● 500Hz ● 1000Hz	
	OK Cancel	Apply

You can choose one pre-defined mode from the list.



If you want to choose one of the pre-defined backlight modes such as those for FPS, MMO, MOBO and RTS games, choose "Custom settings" from the list, then choose the mode.

		▲ =
Profile1	277	
Profile2		
Profile3		
Macro	ESC F1 F2 F3 F4 F5 F6 F7 F8 F9 F10 F11 F12 P5 SL P9 a 6 6 6 F H H H B a 0 F H 6 6 6	
	100 y 11 26 3# 43 5% 6∧ 7% 8+ 91 01 ±+ ← INS HM PU Mi	
✓ Ligh Clouds fly Go with the stream	A S P F G H J K L :: " A VOLCAND	
Brightne Clouds fly Winding paths The trial of light		
Speed Breathing		
Color Ripple graff I Fast run without t		
Directi Snow winter jasm Flowers blooming		
Swift action Hurricane	USB Report	
ReAccumulate Digital Times	●125Hz ● 250Hz ● 500Hz ● 1000Hz	
Surmount Both ways Fast and the Eurio	OK Cancel	Appl
Custom settings		









If you want to get back to default settings, click "Restore Default".

		▲ = ×
Profile1	77	
Profile2		
Profile3		
Macro Ligh	SS FIFZ F3 F4 F3 F6 F7 F8 F9 F10 F11 F12 F5 SL F8 M F1 F2 F3 F4 F3 F6 F7 F8 F9 F10 F11 F12 F5 SL F8 M F1 F2 F3 F4 F5 F6 F7 F8 F9 F10 F11 F12 F5 SL F8 M F1 F2 F3 F4 F5 F6 F7 F8 F9 F10 F11 F12 F5 SL F8 M F1 F1 F1 F1 F12 F5 SL F8 M F1 F1 F1 F12 F5 SL F8 M F1 F1 F1 F12 F5 SL F8 M F1 F1 F12 F13 F11 F1 F12 F5 SL F8 M F1 F1 F12 F13 F11 F1 F12 F5 SL F8 M F1 F1 F12 F13 F11 F11 F12 F5 SL F8 M F1 F1 F12 F13 F11 F11 F12 F5 SL F8 M F1 F1 F12 F13 F11 F11 F12 F5 SL F8 M F1 F1 F12 F13 F11 F11 F12 F5 SL F8 M F1 F1 F12 F13 F11 F11 F12 F5 SL F8 M F1 F1 F12 F13 F11 F11 F12 F5 SL F8 M F1 F1 F12 F13 F11 F11 F12 F5 F12 F11 F11 F12 F12 F12 F12 F12 F12 F12	
Restore Default	USB Report 125Hz 0 250Hz 0 500Hz 0 1000Hz	
	OK	Apply