


MODECOM FREETAB 2099

Firmware updates >>> Android 4.0.4 ICS >>> **Version 1**

- Before updating charge the tablet
- Updates erases all data from the device
- Please carry out updating proces in accordance
- To run an update, you will need a desktop computer or laptop and card reader along with a microSD memory card min.1GB

The first launch of the device after the update may take a little longer than normally (a few minutes), as it is connected with the installation of the components.

1. Prepare microSD card reader and microSD card min.1GB
2. From the following link download the file containing updated to Android 4.0.4 Version 1
http://freetab.eu/softy/ENG/Tablets/FreeTAB_2099/Firmware/Android_4.0.4/Version_1/EN/Firmware_2099_android_4.0.4_version_1.zip
3. Unzip the file **Firmware_2099_android_4.0.4_version_1.zip** on computer disk drive, a folder named Firmware_2099_android_4.0.4_version_1 will be created
4. Place the microSD card into the reader and plug it into your computer
5. Go to the folder Firmware_2099_android_4.0.4_wersja_1 and copy a file **update.img** to microSD
6. Turn on the tablet and boot the system, then insert the microSD card into the memory card slot, the screen will ask you to start the update proces, click **Install**

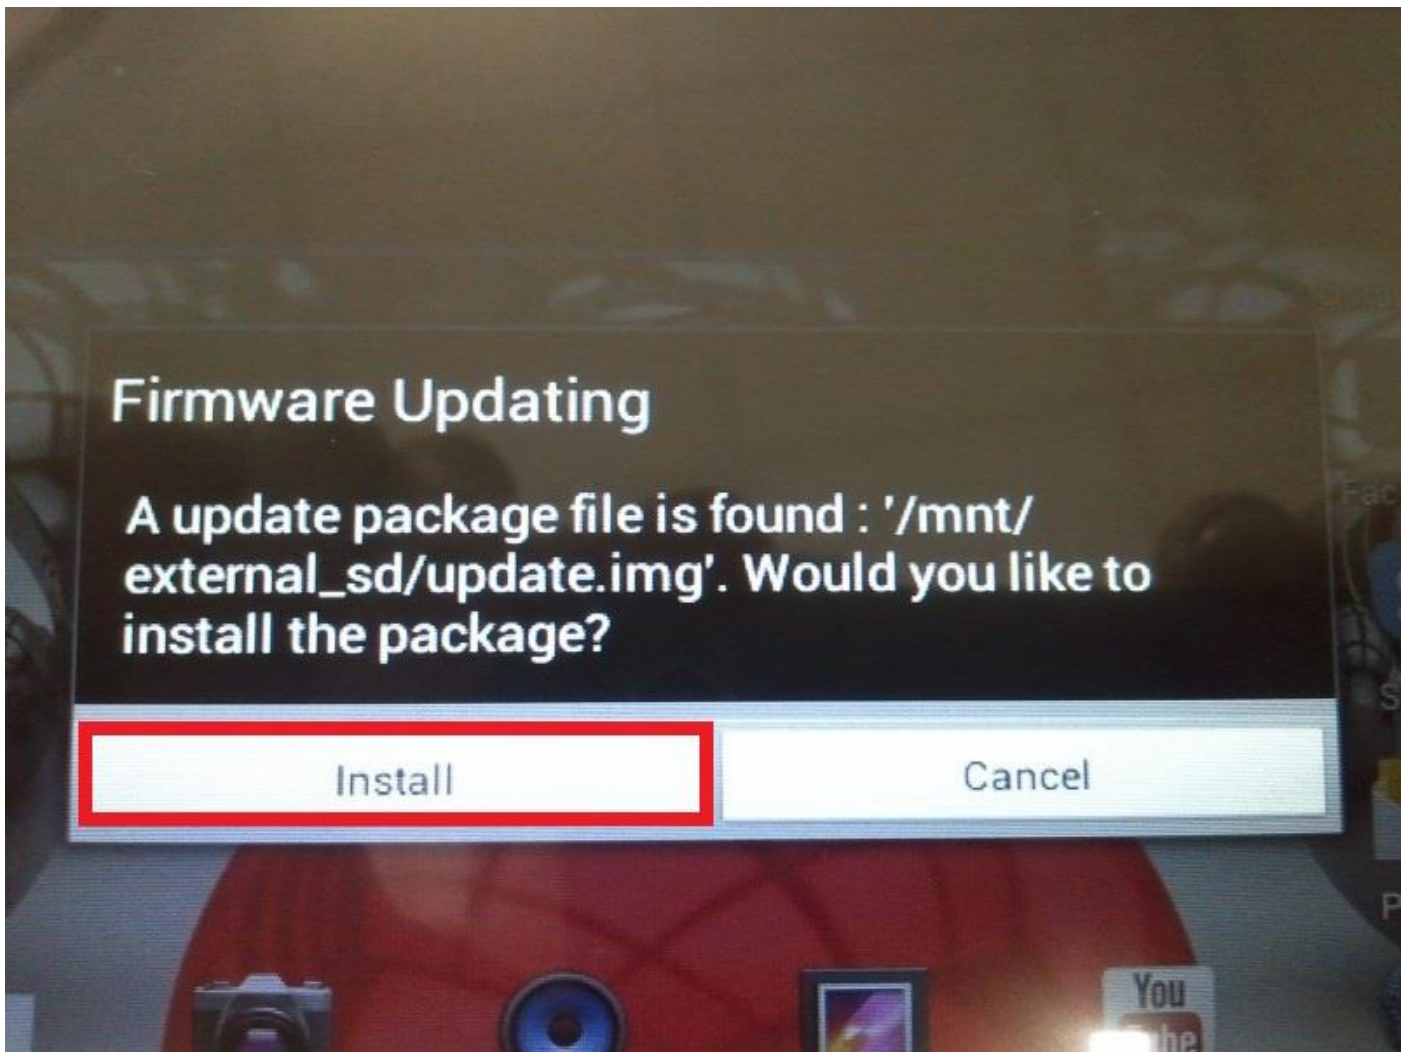

7. The installation procedure takes approximately 5 minutes after the system starts automatically



The software has been properly installed, delete the file update.img with microSD memory card

