

freelab 1004
IPS x4

user's manual



MODECOM

Contents	
Keys and Functions	5
I. Getting Started	6
1.1 Turn on/off	6
1.2 Lock/unlock the screen (sleep mode)	6
1.3 Connect to computer	7
II. Your Home Screen	7
2.1 Change wallpaper for home screen:	8
2.2 Add/delete applications on home screen:	8
2.3 Add widgets to home screen:	8
III. Network Connection	9
3.1 Wi-Fi	9
IV. Internet Browsing	10
4.1 Internet Browsing	10
V. Multi-media Functions	11
5.1 Music	11
5.2 Video	11
5.3 Gallery	13
5.4 Camera	13
VI. Settings	14
VII. Battery	15
Troubleshooting	16

Spis treści

Klawisze i funkcje	18
I. Rozpoczęcie użytkowania	19
1.1 Włączanie/Wyłączanie	19
1.2 Blokowanie/Odblokowanie ekranu (Tryb uśpienia)	20
1.3 Podłączanie do komputera	20
II. Ekran główny urządzenia	21
2.1 Zmiana tapety ekranu głównego	22
2.2 Dodawanie i usuwanie aplikacji na ekranie głównym	22
2.3 Dodawanie widżetów na ekran główny	22
III. Podłączenie do sieci	23
3.1 Wi-Fi	23
IV. Przeglądanie internetu	24
4.1 Przeglądanie internetu	24
V. Funkcje multimedialne	25
5.1 Muzyka	25
5.2 Wideo	25
5.3 Galeria	27
5.4 Kamera	27
VI. Ustawienia	28
VII. Bateria	30
Rozwiązywanie problemów	31

FreeTab 1004
IPS x4

GB

Welcome

Thank you for purchasing this tablet.

It brings you much convenience for your business (supports Word, Excel, send & receive e-mails...) and entertainment (supports 3D game, chatting, movie playback, eBooks.....).


Running on Android 4.1, with a quadcore 1.0GHz processor and highly responsive capacitive touch screen, it brings you wonderful user experience.

Before beginning, please refer to this user manual carefully.

Important Notices

- The new battery will be in its best condition after 2-3 times full charge and discharge.
- While using the earphone, if the volume is excessively high it may cause hearing damage. So please adjust the volume of the player to a moderate level and balance the time of using.
- Do not disconnect the tablet suddenly when formatting or uploading and downloading, which can lead to program errors.
- Do not dismantle the tablet by yourself, and do not use alcohol, thinner or benzene to clean its surface.
- Do not use the tablet while driving or walking.
- The tablet is not moisture and water resistant. Please do not use it in a damp environment.
- Do not drop or hit it to hard surface, or the screen may get damaged.
- Do not upgrade the firmware by yourself. This would cause damage to your tablet.

Keys and Functions

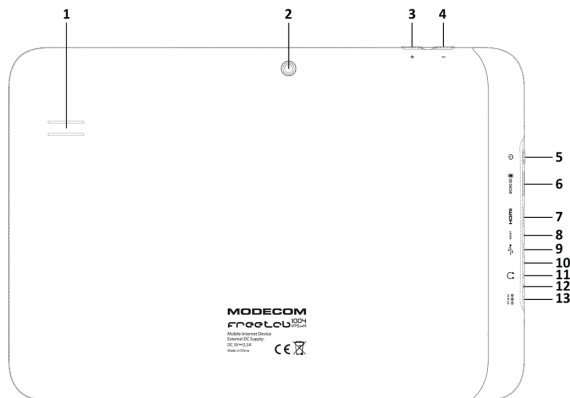

1. Speaker	Speaker
2. Rear camera	2M pixel rear camera
3. Volume + key	Press to increase the volume
4. Volume - key	Press to decrease the volume
5. Power and lock key	Hold and press to turn on or turn off the unit. Briefly press to turn on or turn off the screen
6. TF card slot	To insert your TF card
7. mini HDMI	Connect to TV output via a HDMI cable
8. Reset	Press to reset the tablet if it freezes or behaves abnormal
9. micro USB	Connect to a computer via a USB cable to transfer data (music, videos, photos, etc.) USB OTG, supports mouse, keyboard, USB flash disk, etc, with a converting cable
10. Microphone	Microphone
11. Earphone Jack	To connect your earphone


12. LED	LED is active while charging
13. Power jack (DC input)	Connect to a 5V output adaptor as included in the accessories

I. Getting Started

1.1 Turn on/off

1.1.1 Turn on

To start your tablet, press and hold the power key at the right side of your tablet for a while. Tab and drag the lock out of the circle to unlock.

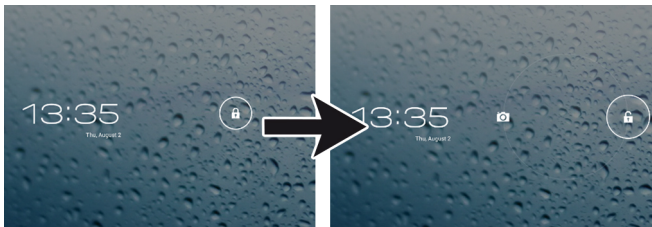

Tab and drag the lock  out of the circle to unlock.

Drag the lock to right: you will go to the home screen.

Drag the lock to left: you will go to camera directly.

1.1.2 Turn off

To power off your tablet, press and hold the power button until the "Would you like to shut down?" dialog appears and tap "OK" to power it off.

1.2 Lock/unlock the screen (sleep mode)


To save battery, you should put your tablet in sleep mode by turning off the LCD display. To do this, shortly press the power key. Press it again to wake up the screen.

1.3 Connect to computer

You can connect your tablet to your computer with the supplied USB cable so you can transfer media files.

If your computer is XP system, please install a Windows Media Player 11 for your computer before transfer media files as android 4.1 system needs Windows Media Player 11 support.

II. Your Home Screen

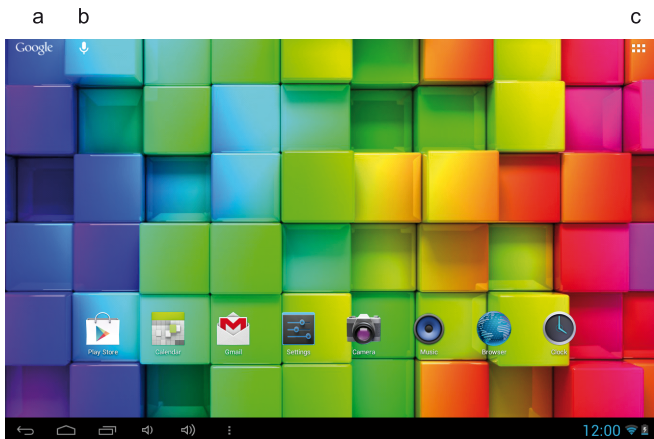


d	e	f	g	h	i	j	kl
a. Google search	Tap to enter Google search page						
b. Voice search	Tap to open voice search						
c. Applications	Tap to open applications						
d. ESC key	Tap to return to the previous screen/ page.						
e. Home key	Tap to return to your home page						
f. Menu key	Tap to open options						

g. Volume -	Tap to lower the volume
h. Volume +	Tap to upper the volume
i. Recent operations	Tap to show your recent operations
j. Time	Time
k. WIFI Signal	There will be WIFI signal when WIFI connected
l. Battery status	Show battery status

2.1 Change wallpaper for home screen:

Tab and hold your finger in any blank space of the home screen, you will see a pop-up options; you can choose wallpaper from Gallery, live Wallpapers or Wallpapers.

2.2 Add/delete applications on home screen:

There are several apps in the home screen, you can also add more frequently-used app icons in this home page and delete some less frequently-used ones. Tab the app launcher in the top right corner to go to all apps panel, tap and move the app you want to the home screen. To delete an app from home screen, tap and hold it, and them movie it to the remove icon 

2.3 Add widgets to home screen:

Tab all Apps launcher→Tab WIDGETS. There are Analog clock, bookmarks, calendar, Email, and lots of other widgets. Drag the widget you want to the home screen. Tips: Besides your home screen, you can access to other four panels by sliding left or right in your home screen. You can also customize these panels.


III. Network Connection


3.1 Wi-Fi

Wi-Fi can only be used when it connects with home Wi-Fi Access Point (AP) or a free unsecured Wi-Fi hotspot. Under “Wireless & networks”, tap “Wi-Fi” to turn it on. After a moment, your Wi-Fi networks list should populate. If you need to rescan for available networks, tap “scan”

3.1.1 Turn on Wi-Fi

Within the App Panel, tap “Settings” → “Wi-Fi” to turn on wifi.



Your tablet lists the networks it finds within range. Tap a network to connect. If necessary, enter Network SSID, Security, and Wireless password, and tap “Connect”. When your tablet is connected to the network, the wireless indicator  appears in the status bar. Waves indicate connection strength.


3.1.2 Turn off Wi-Fi

Please turn off Wi-Fi if you’re not using it to save the battery. To turn off Wi-Fi, Tap it again.



3.1.3 Add a Wi-Fi network

Users may also add a Wi-Fi network under “Wi-Fi settings”. In “Wi-Fi settings”, tap “Add network”. Enter the SSID (name) of the network. If necessary, enter security or other network configuration details. Touch Save.

Note: Network status icons turn blue  if you have a Google Account added to your tablet and the tablet is connected to Google services, for syncing your Gmail, Calendar events, contacts, for backing up your settings, and so on.


IV. Internet Browsing

4.1 Internet Browsing

Before using your browser, make sure Wi-Fi or internet is connected.


In your app panel, Tab the browser  icon to open your browser.

Tap the address bar, the Android keyboard will appear for your entry of keywords or URL.




The screenshot shows a mobile browser interface with the following elements:


- Address Bar:** Displays the URL `http://www.nytimes.com/`. Above it are navigation icons: back, forward, home, and refresh.
- Page Title:** "The New York Times" with the date "Thursday, February 16, 2012" and "Last Update: 12:17 AM ET".
- Navigation Buttons:**
 - New tab:** Indicated by a red arrow pointing to the top-left corner.
 - bookmark this page:** Indicated by a red arrow pointing to the star icon.
 - open bookmarks:** Indicated by a red arrow pointing to the magnifying glass icon.
 - submenu:** Indicated by a red arrow pointing to the three-dot menu icon in the top-right corner.
- Main Content:**
 - Headline:** "Aggressive Acts by Iran Signal Pressure on Its Leadership" by Scott F. Shane and Robert F. Worth.
 - Image:** A photograph of a long, narrow hallway with a person in the distance.
 - Sub-headline:** "At 9/11 Memorial, Police See Suicide Risk" by AP Staff.
 - Text:** "Police officials and grief experts worry that the National September 11 Memorial poses a unique hazard because of its layout and its powerful relationship to the attacks."
- Other Elements:**
 - Left Sidebar:** "Switch to Global Edition", "JOBS REAL ESTATE AUTOS ALL CLASSIFIEDS", "WORLD U.S. POLITICS NEW YORK BUSINESS DEALBOOK TECHNOLOGY SPORTS SCIENCE HEALTH OPINION ARTS Books Movies Music Television".
 - Right Sidebar:** "OPINION: Editorial: A Rare Deal Congressional leaders are putting the finishing touches on an agreement to extend the payroll tax cut and federal jobless benefits through 2012. The deal is imperfect but sound."; "MARKETS: JAPAN CHINA Nikkei Hang Seng Shanghai 9,224.71 21,191.36 2,954.11 -25.93 -121.89 -12.59 -0.38% -0.81% -0.53%"; "A SPECIAL OFFER FROM THE TIMES".


Tab the  icon in the top corner of the browser page to open the submenu.

V. Multi-media Functions


5.1 Music


After loading your music into your tablet, tap the music icon  to open the music player. You can select songs by Artist, Albums, songs or Play lists. Tap to select. The media player allows you to shuffle, skip, or pause your current selection and even displays the album artwork when available.

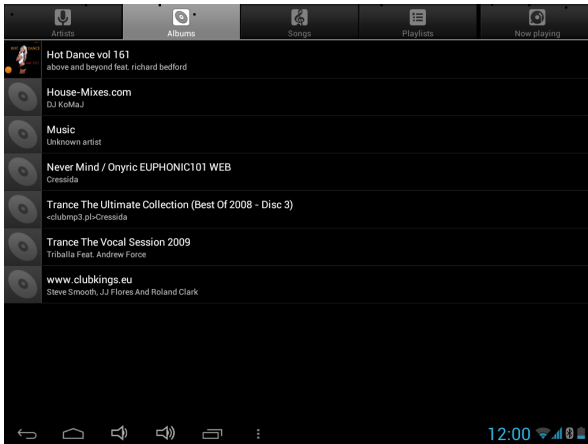


Tab  in the bottom line to open a submenu in music playing page.

5.2 Video

You can play videos saved in your tablet or TF card. To play, tap Video  icon to launch the video player:

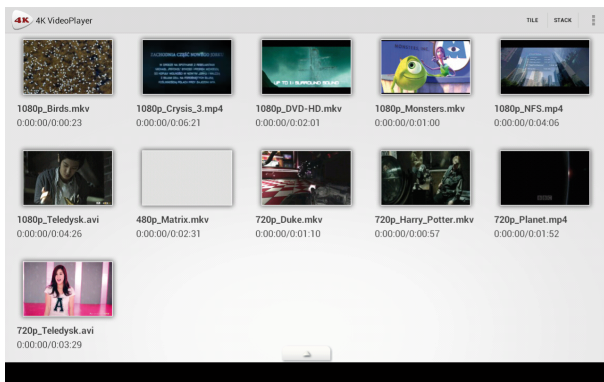

Tap the video you would like to play. Tap the screen to show the video tool bar. You can play back, fast forward, pause your video here. You can also add bookmark for your video, adjust brightness, or set screen ratio here. Here is the toolbar:



With the Wi-Fi on, you are also able to view an on-line video.

5.2.1 HDMI output


a. Tap 'Video player' or other video players and play a required movie.


b. Adjust your TV set and select "HDMI" output

c. Connect the tablet to your TV via HDMI cable, and wait for a few seconds for your TV set to receive signal.

You can also operate on your tablet while HDMI connected..

5.3 Gallery


You can view, show off, and even edit your digital pictures on the tablet's full color, high-resolution display. After loading your media, tap Gallery  to display your pictures:

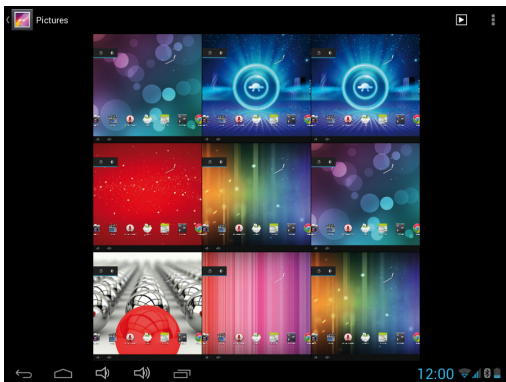

Tap the picture you want to display it, and slide right or left to show other pictures.

Tap the menu icon, you can edit, rotate, crop, or set it as wallpaper.

5.4 Camera

Tap the  icon to open camera. Your tablet is built in 0,3M front camera and 2M rear camera. You can take a photo, or a video both by front camera and rear camera.

Note: After you power on your tablet, you can go to camera directly by drag the lock to left.

Tab to take a photo

To select Front/ back camera

To view photos



Set white balance, Scene mode, etc.


Change to video-taking Interface

Pan-shot

VI. Settings

Tap the “Settings” icon  to go to settings.

You can check and set wireless&networks, sound, display, storage, Battery, Accounts &sync, security, language, date&time, about tablet, etc.

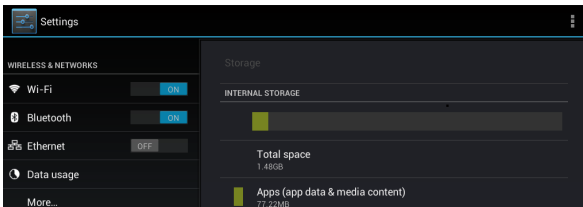

Wi-Fi: tap “Settings” → “Wireless & networks” to turn on wifi and scan. It will show a list of Wi-Fi networks scanned in range. Choose a strong Wi-Fi network to connect. (You may need to input the password).

Display: To set Brightness, Wallpaper, Sleep time-out, Font size here.

Storage: Check internal storage here. If you insert a Micro SD card, or USB disk, you can check the total and available space for your Micro SD card or USB disk. Please unmount it to safely remove it.

Battery: Check the Battery status here.

Display: Tab “Settings” → “Display” to set brightness, screen time-out, etc.

Language & input: to set language and keyboard input.

Backup & reset: to go to submenu “back up my data” and “Factory data reset”. If you choose factory data reset, all data from your tablet’s internal storage will be erased. Choose this option carefully.

About Tablet: To check information about your tablet, such as Model number, android version, etc.

VII. Battery




Very Low Battery



Full Battery



Charging Battery

 indicates that the power of Battery is full. When the battery level becomes too low, a prompt comes up to note you to charge your tablet.

While charging, you can check the charging status in the lock screen:



It takes around 5 hours to charge your tablet to full battery. Please only use a 5V/2.5A adaptor included in the gift box to charge it.

Troubleshooting

Can not turn on the tablet

Check the tablet's power level; please charge it before starting it. In case your tablet still cannot be turned on, you may try to reset it

No sound from earphone

Check if volume is set to '0'. Or earphone may be broken, please change for another one.

Big noise

Check if there is dust in the earphone or speaker. Check if the file is broken.

Screen drift or unresponsive screen

To pin the reset button to reset your tablet and power it on again.

Application not workable

Possible reasons may be that this app is not compatible with your OS or the downloaded .apk file is broken so you may need to download a full version.

How delete a Google account?

If an account is added, the account is shown in "Accounts & sync" of "Settings", where you may also add another account. To delete an undesired account, go to "Settings" → "Privacy settings" → "Factory data reset". Your tablet's internal storage, downloaded apps, etc. will also be deleted, except the info in your flash memory. Be careful before you carry out this operation.

Powitanie

Dziękujemy za zakup tabletu.

Zakupiony tablet jest urządzeniem przydatnym w pracy (współpracuje z programami Word, Excel, wysyła i odbiera wiadomości elektroniczne...) i rozrywce (obsługuje gry 3D, czatowanie, odtwarzanie filmów, e-booki...).


Tablet z systemem Android 4.1, procesorem czterordzeniowym 1,0 GHz i pojemnościowym ekranem dotykowym o szybkim poziomie reakcji. Przed rozpoczęciem użytkowania należy dokładnie zapoznać się z niniejszym podręcznikiem.

Ważne informacje

- Zaleca się dwu- lub trzykrotne całkowite rozładowanie i naładowanie baterii w celu zapewnienia jej optymalnej pracy.
- Ustawienie zbyt wysokiej głośności w słuchawce może spowodować uszkodzenie słuchu. Dlatego należy uregulować natężenie dźwięku odtwarzacza na poziomie umiarkowanym i korzystać z urządzenia przez odpowiedni czas.
- Nie odłączaj nagle tabletu podczas formatowania i pobierania lub wysyłania, ponieważ może to prowadzić do powstania błędów w programie.
- Nie wykonywać samodzielnego demontażu tabletu i nie używać alkoholu, rozcieńczalnika ani benzenu do czyszczenia powierzchni urządzenia.
- Nie używać tabletu podczas prowadzenia samochodu lub chodzenia.
- Tablet nie jest urządzeniem odpornym na wilgoć oraz wodę. Urządzenia nie należy używać w wilgotnym otoczeniu.

- Upuszczenie lub uderzenie tabletu o twardą powierzchnię może spowodować uszkodzenie ekranu.
- Nie wykonywać samodzielnego unowocześniania wersji wbudowanego oprogramowania. Spowoduje to uszkodzenie tabletu.

Klawisze i funkcje

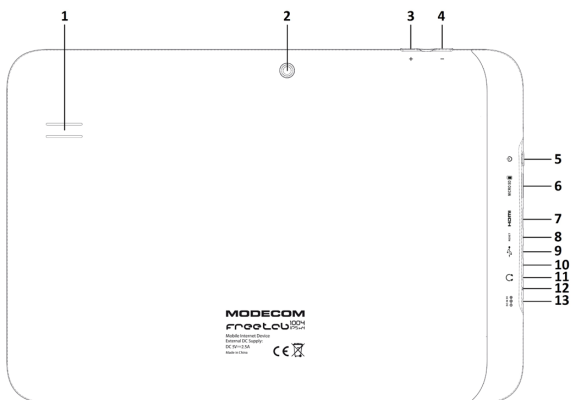

1. Głośnik	Głośnik
2. Tylny aparat	Tylny aparat o rozdzielczości 2 megapikseli
3. Przycisk Głośności +	Naciśnij przycisk, aby zwiększyć głośność
4. Przycisk Głośności -	Naciśnij przycisk, aby zmniejszyć głośność


5. Przycisk włączania / wyłączenia i blokady urządzenia	Naciśnij i przytrzymaj przycisk w celu włączenia lub wyłączenia urządzenia. Aby włączyć lub wyłączyć ekran naciśnij krótko przycisk.
6. Wejście kart TF	Złącze kart pamięci microSD
7. Złącze mini HDMI	Umożliwia podłączenie tabletu do telewizora za pomocą kabla HDMI
8. Reset	Przycisk Reset
9. Wejście micro USB	Umożliwia podłączenie tabletu do komputera za pomocą kabla USB w celu przeniesienia danych (np. filmów, muzyki, zdjęć oraz innych danych) Za pomocą przejściówki możesz podłączyć do tabletu rozmaite akcesoria, takie jak: modem 3G, pamięć flash, dysk twardy, klawiatura, mysz, itp.
10. Mikrofon	Mikrofon
11. Wejście słuchawkowe	Złącze umożliwiający podłączenie słuchawek do urządzenia
12. Dioda LED	Dioda LED aktywna podczas ładowania
13. Wejście zasilania	Złącze umożliwiający podłączenie ładowarki sieciowej lub samochodowej


I. Rozpoczęcie użytkowania

1.1 Włączanie/Wyłączanie

1.1.1 Włączanie

Aby uruchomić tablet naciśnij i przytrzymaj przez chwilę, znajdujący się z prawej strony urządzenia przycisk POWER.

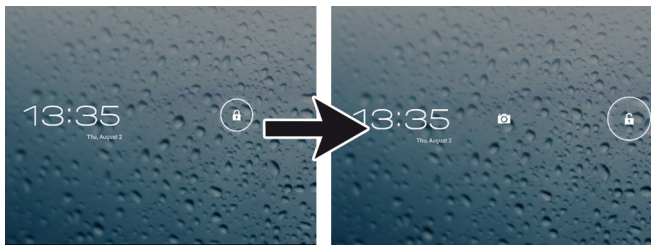

Aby odblokować tablet kliknij i przeciągnij zamkniętą kłódkę  na prawą stronę poza obręb koła w którym się znajduje.

Aby przejść bezpośrednio do aparatu, przeciągnij symbol kłódky na lewą stronę ekranu poza obręb koła w którym się znajduje.

1.1.2 Wyłączanie

W celu wyłączenia tabletu, naciśnij i przytrzymaj przycisk POWER do momentu w którym pojawi się okienko dialogowe z pytaniem „czy chcesz wyłączyć” następnie naciśnij „ok.” aby potwierdzić.

1.2 Blokowanie/Odblokowanie ekranu (Tryb uśpienia)


W celu oszczędzenia energii, możesz wprowadzić tablet w tryb uśpienia poprzez wyłączenie ekranu LCD. Aby wyłączyć ekran LCD, naciśnij przycisk POWER. Aby wrócić do trybu normalnego naciśnij ponownie przycisk POWER.

1.3 Podłączanie do komputera

Aby przenieść pliki, możesz podłączyć tablet do komputera za pomocą dostarczonego wraz z urządzeniem przewód USB.

Jeśli na twoim komputerze zainstalowany jest system Windows XP, proszę zainstalować program Windows Media Player 11 przed dokonaniem transferu danych.

II. Ekran główny urządzenia

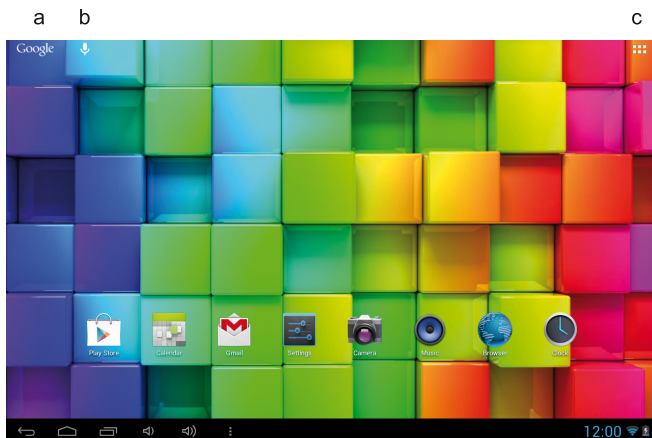

d	e	f	g	h	i	j	k	l
a.	Wyszukiwanie w przeglądarce Google							
b.	Wyszukiwanie głosowe							
c.	Aplikacje							
d.	Klawisz ESC							
e.	Klawisz HOME							
f.	Ostatnie czynności							
g.	Głośność -							
h.	Głośność +							
i.	Klawisz MENU							
j.	Czas systemowy							

k. Sygnał WiFi	Pokazuje siłę sygnału połączenia WiFi
l. Stan baterii	Pokazuje stan baterii


2.1 Zmiana tapety ekranu głównego

Przytrzymanie na dowolnym pustym polu ekranu głównego spowoduje pojawienie się wyskakujących opcji: można wybrać zdjęcie z galerii, tapety ruchome lub tapety zwykłe.

2.2 Dodawanie i usuwanie aplikacji na ekranie głównym

Ekran główny posiada różnorodne aplikacje, na ekran można także dodać ikony najczęściej używanych aplikacji i usunąć ikony aplikacji używanych rzadziej.

Dotknąć program uruchamiający aplikację znajdujący się w prawym górnym rogu, aby przejść do panelu aplikacji, dotknąć i przesunąć aplikację, która ma znaleźć się na ekranie głównym.

Aby usunąć aplikację ze strony głównej, należy na nią nacisnąć i przytrzymać, a następnie przesunąć na ikonę usuwania. 

2.3 Dodawanie widżetów na ekran główny

Dotknąć program uruchamiający wszystkie aplikacje → nacisnąć WIDŻETY. Dostępne są różnorodne widżety – zegar analogowy, zakładki, kalendarz, e-mail i wiele innych. Przeciągnąć widżet, który ma znaleźć się na stronie głównej.

Porady. Przesuwając ekran główny na lewo lub na prawo, można wejść na cztery pozostałe panele. Można także dostosować zawartość paneli do własnych potrzeb.


III. Podłączenie do sieci


3.1 Wi-Fi

Wi-Fi można używać wyłącznie wówczas, gdy łączy się z domowym punktem dostępu Wi-Fi lub bezpłatnym, niezabezpieczonym hotspotem Wi-Fi. Aby włączyć Wi-Fi, należy nacisnąć opcję „Wi-Fi” w zakładce „dostęp bezprzewodowy i sieciowy”. Po chwili powinien pojawić się wykaz sieci Wi-Fi. Jeżeli konieczne jest ponowne przeszukiwanie dostępności sieci, należy dotknąć opcji „przeszukiwanie”.

3.1.1 Włączanie Wi-Fi

Aby włączyć Wi-Fi, należy na panelu aplikacji dotknąć „ustawienia” → następnie „dostęp bezprzewodowy i sieciowy” → „Wi-Fi”.



Tablet przedstawia wykaz sieci znalezionych w swoim zasięgu. Dotknąć sieć, aby się połączyć. W razie potrzeby należy wejść w opcję sieci SSID, bezpieczeństwa i hasła sieci bezprzewodowej i dotknąć opcji „podłącz”. Podczas podłączenia do sieci na pasku stanu pojawia się wskaźnik połączenia bezprzewodowego . Wielkość fali oznacza natężenie połączenia.

3.1.2 Wyłączenie Wi-Fi

Wyłączenie połączenia Wi-Fi, gdy nie jest używane, pozwala na oszczędzenie baterii. Wi-Fi wyłącza się przez ponowne dotknięcie opcji Wi-Fi.




3.1.3 Dodawanie sieci Wi-Fi

Użytkownicy mogą także dodawać sieci Wi-Fi w zakładce „ustawienia Wi-Fi”. W ustawieniach Wi-Fi należy nacisnąć opcję “dodaj sieć”. Należy podać SSID (nazwę sieci). W razie potrzeby należy podać dane dotyczące bezpieczeństwa lub inne dane konfiguracji sieci. Dotknąć, aby zapisać.


IV. Przeglądanie internetu

4.1 Przeglądanie internetu


Przed skorzystaniem z przeglądarki należy upewnić się, że jest dostęp do internetu (Wi-Fi lub sieć). Na panelu aplikacji należy nacisnąć ikonę przeglądarki  otwierającą przeglądarkę.

Po dotknięciu paska adresu pojawi się klawiatura umożliwiającą wpisanie haseł lub URL.

nowa zakładka dodaj stronę do zakładek otwórz zakładki submenu

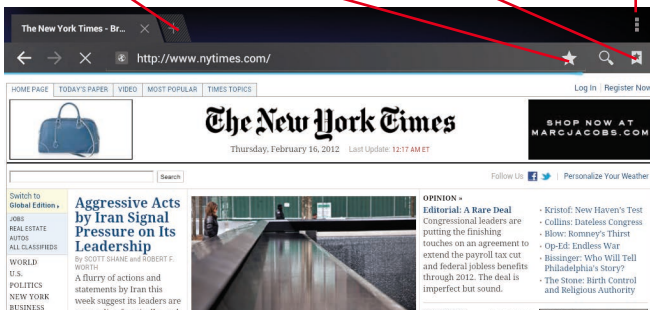


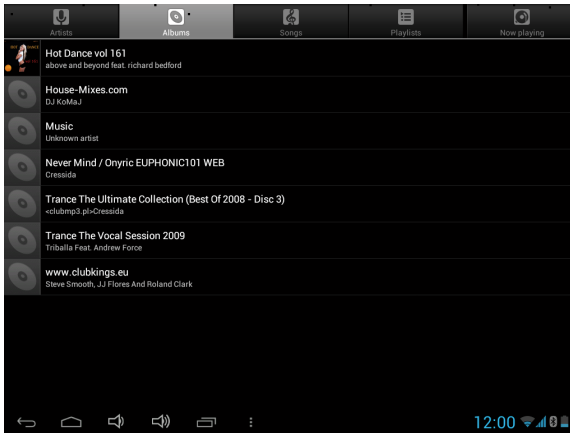
The screenshot shows a mobile browser interface with the URL <http://www.nytimes.com/>. The browser's address bar includes navigation icons (back, forward, refresh, search) and a star icon for bookmarks. Below the address bar, there are navigation options: HOME PAGE, TODAY'S PAPER, VIDEO, MOST POPULAR, and TIMES TOPICS. The main content area displays the New York Times logo and a headline: "Aggressive Acts by Iran Signal Pressure on Its Leadership". To the right, there is an "OPINION" section with a sub-headline "Editorial: A Rare Deal" and a list of related topics.


Naciśnij ikonę  znajdującą się w górnym rogu strony przeglądarki, aby otworzyć podmenu.

V. Funkcje multimedialne


5.1 Muzyka


Po załadowaniu muzyki na tablet należy nacisnąć ikonę muzyki , która otwiera odtwarzacz muzyki. Można wybrać utwory według artysty, albumu, utworów lub listy odtwarzania. Naciśnięcie powoduje wybranie utworu. Odtwarzacz multimedialny umożliwia przedstawianie kolejności, omijanie lub zatrzymywanie wybranej kategorii, a nawet wyświetlenie okładki albumu, gdy jest dostępna.




Dotknąć  na dole, aby otworzyć podmenu na stronie odtwarzania muzyki.

5.2 Wideo

Można odtwarzać filmy wideo zapisane na tablecie lub karcie TF. Naciśnięcie ikony wideo  uruchamia odtwarzacz filmów wideo.

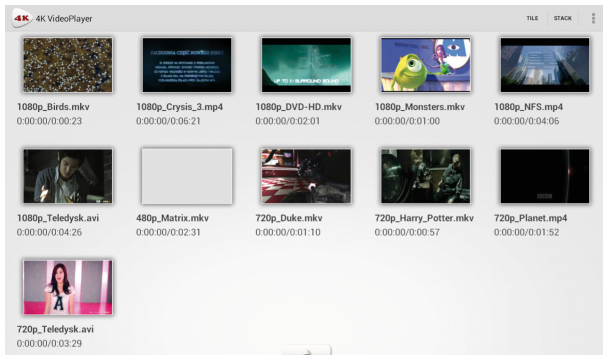

Dotknąć film wideo, który ma być odtwarzany. Po dotknięciu ekranu pojawia się pasek narzędzi wideo. Filmy wideo można cofać, przewijać szybko do przodu, zatrzymywać. Do filmu wideo można dodawać zakładki, regulować jasność lub ustawiać format obrazu. Pasek narzędzi wygląda tak:




Gdy Wi-Fi jest włączone, można także oglądać filmy wideo w trybie on-line.


5.2.1 Wyjście HDMI

- Nacisnąć „Odtwarzacz wideo” i odtwarzać film.
- Wyregulować odbiornik TV i wybrać wyjście „HDMI”.
- Podłączyć tablet do odbiornika TV za pomocą kabla HDMI i odczekać kilka sekund, aby odbiornik TV znalazł sygnał.

Ekran tabletu ciemnieje, gdy używa się funkcji wyjścia HDMI. Po dotknięciu na ciemnym ekranie dowolnego punktu na odbiorniku TV pojawią się opcje „Vol+ / Vol-”, „Play”, „Pause”. Regulację do odpowiedniej głośności, proporcji, jasności, itp. można wykonać przed podłączeniem tabletu do telewizora.


5.3 Galeria

Na kolorowym wyświetlaczu wysokiej rozdzielczości można przeglądać, przekazywać, a nawet edytować zdjęcia cyfrowe. Po załadowaniu multimediów należy nacisnąć zakładkę „galeria” , która pozwala na wyświetlenie zdjęć.

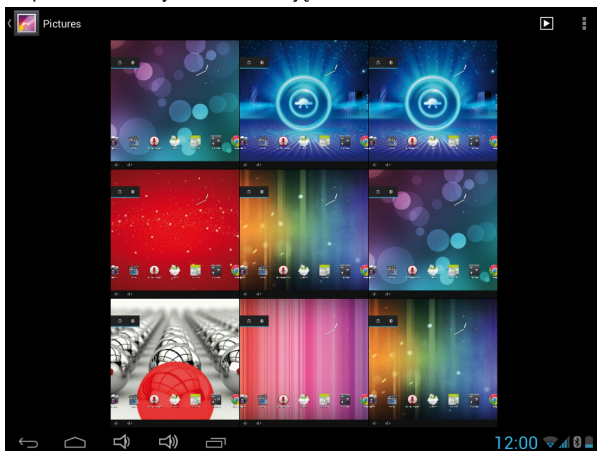


Dotknij zdjęcie, które ma zostać wyświetlone, i przesunąć w prawo lub w lewo, aby zobaczyć pozostałe zdjęcia.


5.4 Kamera


Zakładkę kamery otwiera się po naciśnięciu ikony . Tablet posiada wbudowaną kamerę przednią 0,3 mln pikseli i kamerę tylną 2 mln pikseli. Zarówno kamera przednia jak i tylna umożliwiają wykonywanie zdjęć lub filmów wideo.

Uwaga: Po włączeniu zasilania tabletu można przejść bezpośrednio do zakładki kamery, przeciągając kłódkę w lewo.

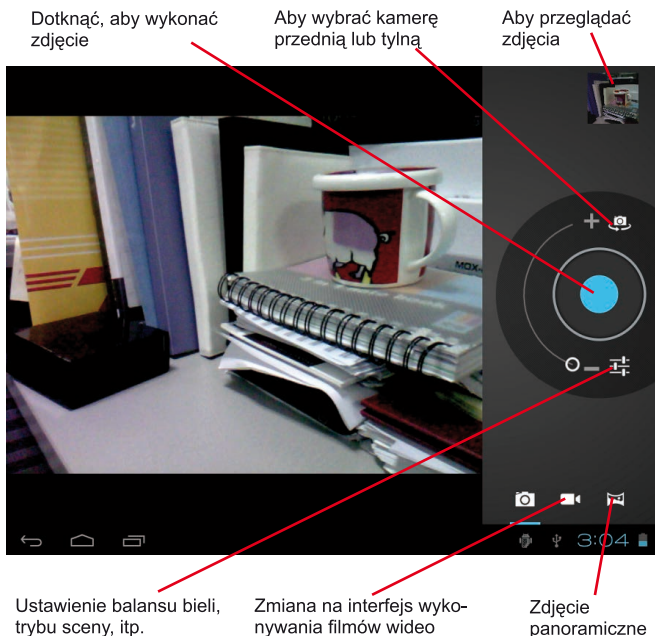

VI. Ustawienia

Do zakładki ustawień przechodzi się po naciśnięciu ikony  „ustawienia”. Zakładka pozwala na sprawdzenie i ustawienie dostępu bezprzewodowego i sieciowego dźwięku, wyświetlacza, pamięci, baterii, kont i synchronizacji, bezpieczeństwa, języka, daty i godziny, informacji o tablecie, itp.

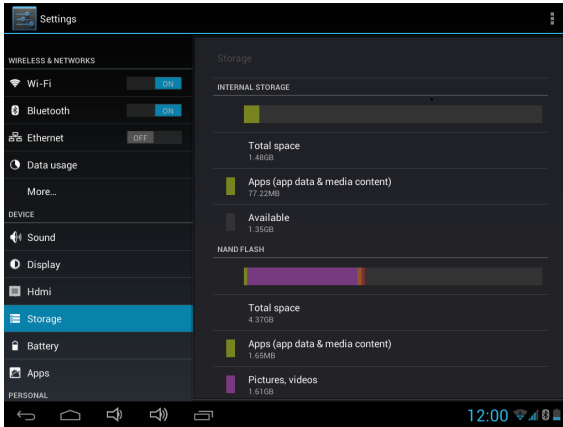

Wi-Fi: włączenie opcji Wi-Fi i wyszukiwanie dostępu następuje po dotknięciu opcji „ustawienia” → „dostęp bezprzewodowy i sieciowy”.

Pojawi się wykaz sieci Wi-Fi przeszukiwanych w dostępnym zakresie. Do podłączenia wybrać sieć Wi-Fi o silnym sygnale (konieczne może okazać się podanie hasła).

Wyświetlacz: opcja pozwala na ustawienie jasności, tapety, wyłączenie czasu uśpienia, wielkości czcionki, wyłączenie ekranu, itp. można ustawić, naciskając opcję „ustawienia” → „wyświetlacz”.

Pamięć: opcja pozwala na sprawdzenie pamięci wewnętrznej. Po włożeniu karty microSD lub dysku USB można sprawdzić całkowite i dostępne miejsce na karcie microSD lub dysku USB. Należy pamiętać o bezpiecznym usunięciu karty lub dysku przez wyjęcie.

Bateria: tutaj można sprawdzić stan baterii.

Język i układ: pozwala na ustawienie języka i układu klawiatury.

Kopia zapasowa i reset: pozwala na wejście do podmenu “utworzenie kopii zapasowej moich danych” i “powrót do ustawień fabry-

cznych". Po wybraniu opcji powrotu do ustawień fabrycznych wszystkie dane znajdujące się w pamięci wewnętrznej tabletu zostaną usunięte. Należy bardzo uważnie wybierać powyższą opcję.

Informacje o tablecie: pozwala na sprawdzenie informacji dotyczących tabletu, m.in. numeru modelu, wersji systemu Android, itp.

VII. Bateria




Very Low Battery



Full Battery



Charging Battery

 wskazuje, że bateria jest całkowicie naładowana. Gdy stopień naładowania baterii jest zbyt niski, pojawia się powiadomienie, aby naładować baterię.

Podczas ładowania baterii można sprawdzić stopień naładowania za pomocą ikony blokady ekranu:



Bateria tabletu jest całkowicie naładowana po ok. 5 godzinach ładowania. Baterię należy ładować wyłącznie przy pomocy adaptera 5V/2.5A znajdującego się w opakowaniu.

Rozwiązywanie problemów

Nie można włączyć tabletu

Sprawdzić stopień naładowania tabletu – należy naładować baterię przed uruchomieniem. Jeżeli nadal nie można włączyć tabletu, należy spróbować zresetować urządzenie.

Brak głosu w słuchawce

Sprawdzić, czy głośność jest ustawiona na "0". Ewentualnie słuchawka może być uszkodzona – należy wymienić na inną.

Duży hałas

Sprawdzić, czy słuchawka lub głośnik nie są zanieczyszczone kurzem. Sprawdzić, czy plik nie jest uszkodzony.

Przesunięcie ekranu lub ekran nie odpowiada

Aby unieruchomić ekran, należy nacisnąć przycisk resetowania, aby zresetować tablet, i ponownie włączyć zasilanie.


Praca z aplikacją jest niemożliwa

Możliwą przyczyną takiej sytuacji może być brak kompatybilności aplikacji z posiadanym systemem operacyjnym, ewentualnie pobrany plik ".apk" jest uszkodzony, dlatego konieczne może się okazać pobranie pełnej wersji.


Jak usunąć konto Google?

Po dodaniu konto jest widoczne w zakładce "konta i synchronizacja" zakładki, "ustawienia", gdzie można także dodać kolejne konto. Aby usunąć konto, należy przejść do zakładki „ustawienia” → „ustawienia prywatności” → „powrót do ustawień fabrycznych”. Usunięta zostanie także pamięć wewnętrzna tabletu, pobrane aplikacje, itp. za wyjątkiem informacji znajdującej się w pamięci flash. Podczas wykonywania tej czynności należy zachować ostrożność.

Environment protection:

 This symbol on our product nameplates proves its compatibility with the EU Directive 2002/96 concerning proper disposal of waste electric and electronic equipment (WEEE). By using the appropriate disposal systems you prevent the potential negative consequences of wrong product take-back that can pose risks to the environment and human health. The symbol indicates that this product must not be disposed of with your other waste. You must hand it over to a designated collection point for the recycling of electrical and electronic equipment waste. The disposal of the product should obey all the specific Community waste management legislations. Contact your local city office, your waste disposal service or the place of purchase for more information on the collection. Weight of the device: 760 g

Ochrona środowiska:

 Niniejsze urządzenie oznakowane jest zgodnie z dyrektywą Unii Europejskiej 2002/96/UE dotyczącą utylizacji urządzeń elektrycznych i elektronicznych (WEEE). Zapewniając prawidłowe usuwanie tego produktu, zapobiegasz potencjalnym negatywnym konsekwencjom dla środowiska naturalnego i zdrowia ludzkiego, które mogą zostać zagrożone z powodu niewłaściwego sposobu usuwania tego produktu. Symbol umieszczony na produkcie wskazuje, że nie można traktować go na równi z innymi odpadami z gospodarstwa domowego. Należy oddać go do punktu zbiórki zajmującego się recyklingiem urządzeń elektrycznych i elektronicznych. Usuwanie urządzenia musi odbywać się zgodnie z lokalnie obowiązującymi przepisami ochrony środowiska dotyczącymi usuwania odpadów. Szczegółowe informacje dotyczące usuwania, odzysku i recyklingu niniejszego produktu można uzyskać w urzędzie miejskim, zakładzie oczyszczania lub sklepie, w którym nabyłeś niniejszy produkt. Masa sprzętu: 760 g

Copyright© 2013. MODECOM S.A. All rights reserved.

MODECOM Logo is a registered trademark of MODECOM S.A.

MODECOM